

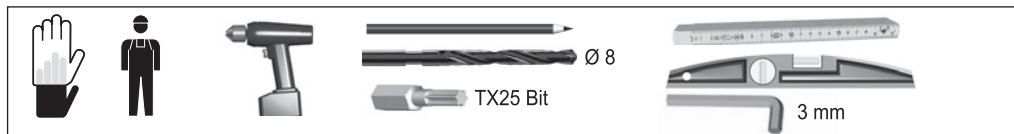


Montage- und Gebrauchsanweisung / Operating and assembly instructions Instructions de montage / Istruzioni di montaggio e d'uso

CE Ineoline Plus Typ: LW0.0003, LW0.0004, LW0.0006, LW0.0008, LW0.0009, LW0.0010, LW0.0011, LLA.0630, LLA.0631, LW1.0033, LW1.0036, LW1.0044, LW1.0048, LW1.0059, LB1.0035


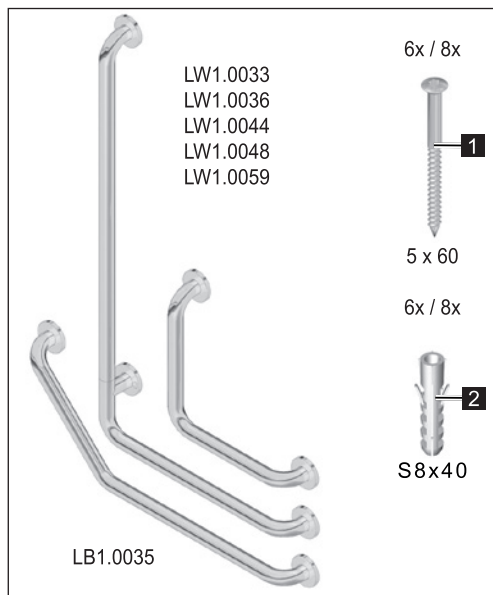


1. Stückliste / Parts list / de pièces détachées / Lista pezzi di ricambio


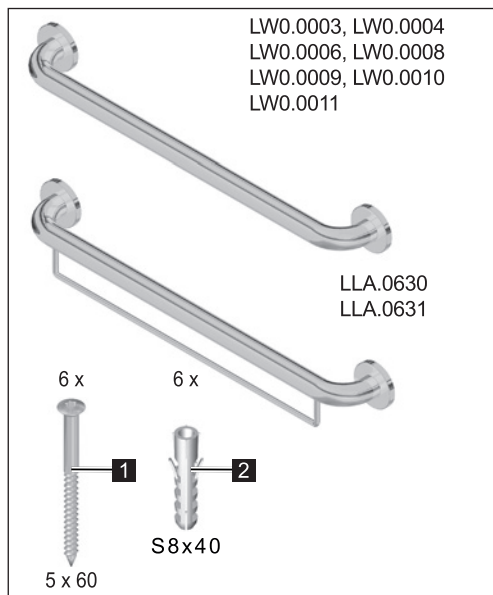


Toleranz - Länge in mm - Winkel in Grad °
Tolérance - longueur en mm - angle en degrés °
Tolleranze - lunghezza in mm - angolo in gradi °





Toleranzklasse	über 120 bis 400	über 400 bis 1000	über 1000 bis 2000
f (fein)	± 0,20	± 0,30	± 0,50
m (mittel)	± 0,50	± 0,80	± 1,20
g (grob)	± 1,20	± 2,00	± 3,00
sg (sehr grob)	± 2,50	± 4,00	± 6,00





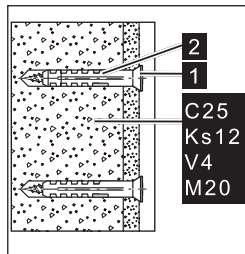
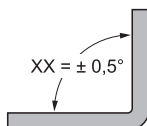






2. Planungshilfe / Planning aids / Aide à la planification / Ausilio per la progettazione

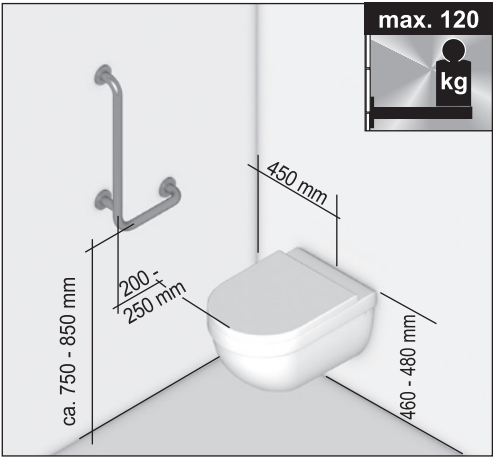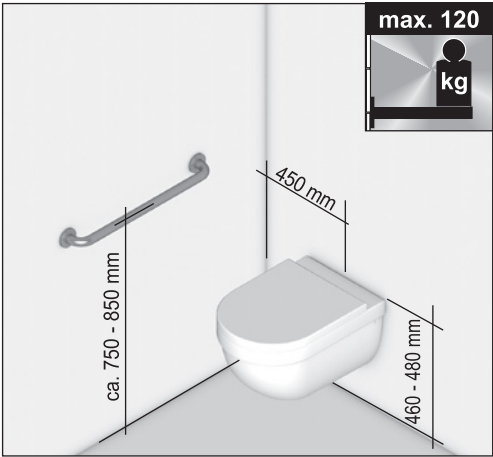

3. Montage / Installation mounting / montage / montaggio

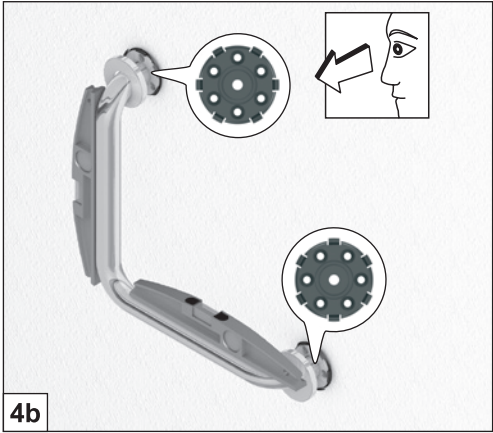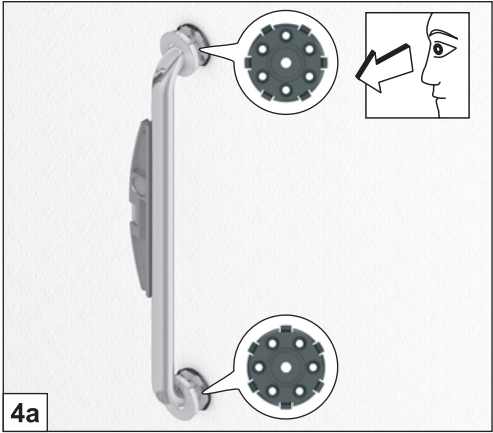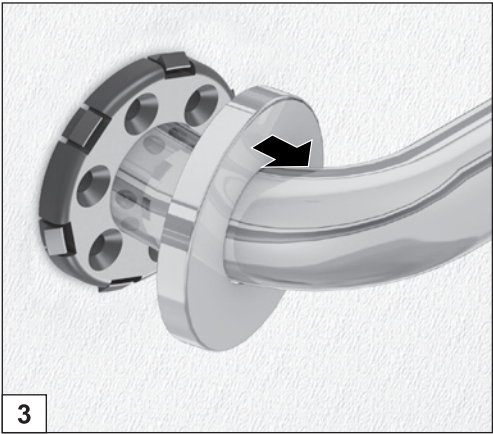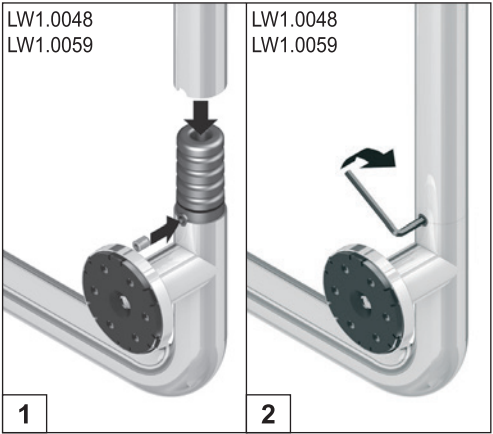

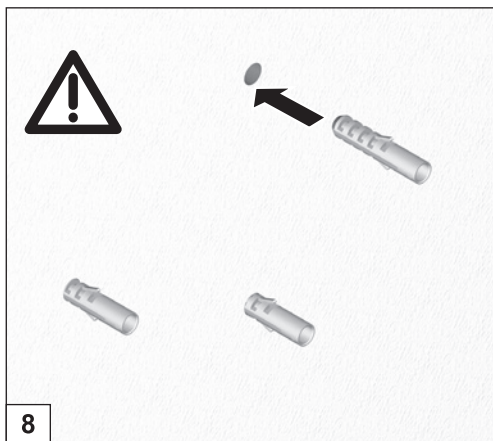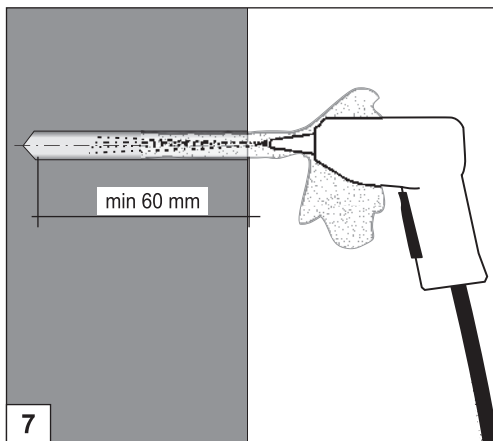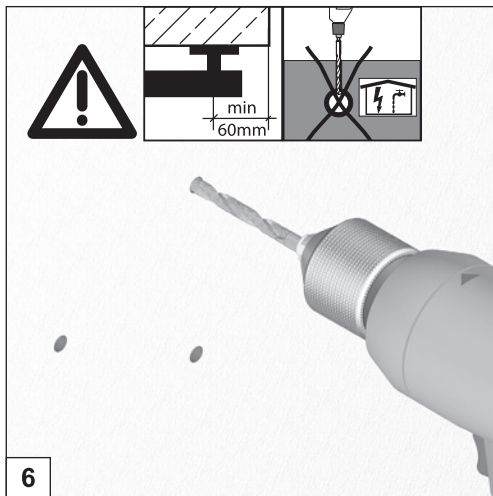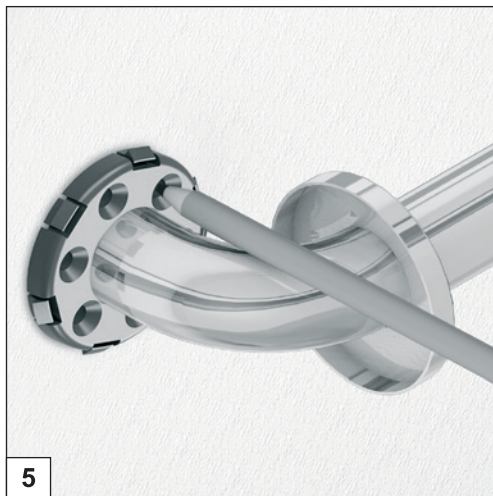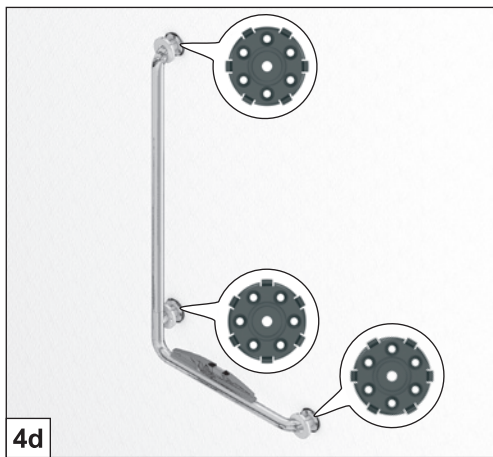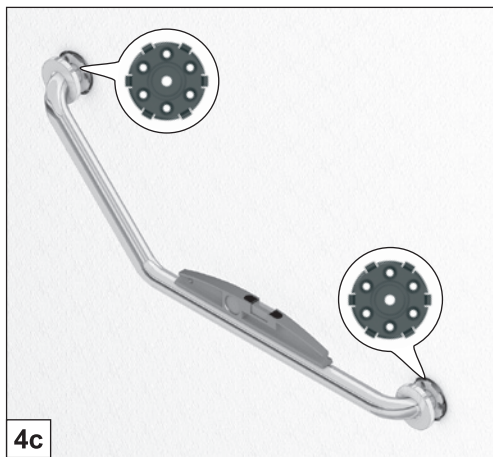

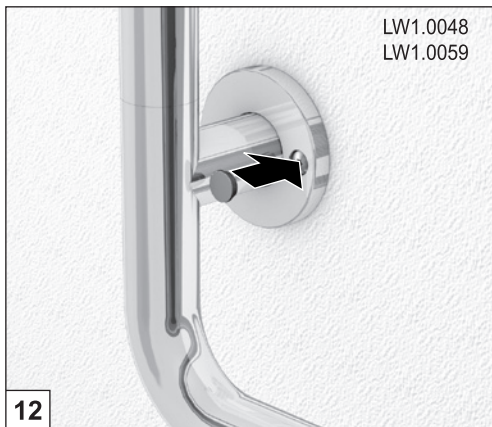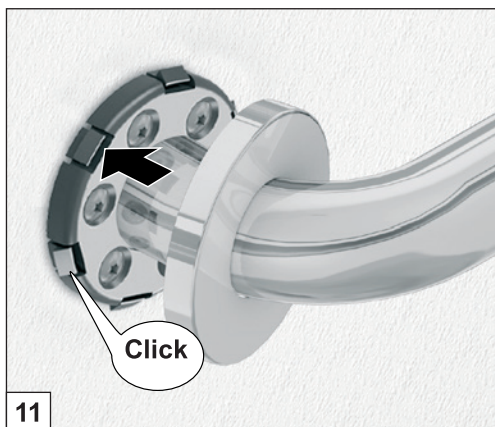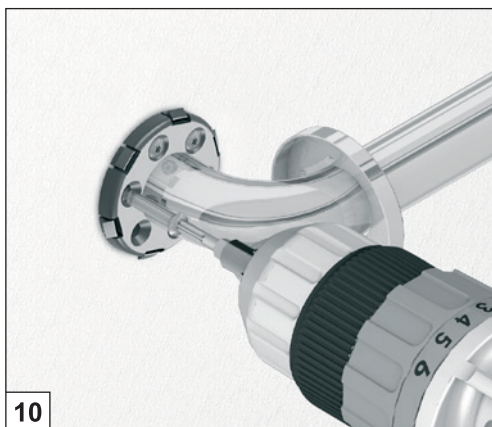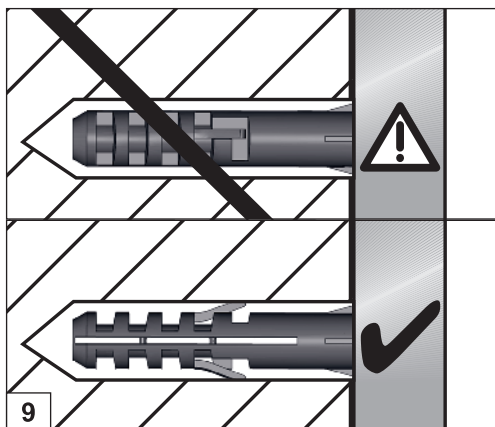

LW1.0048
LW1.0059

4. Pflege und Reinigung / Cleaning and care / Entretien et nettoyage / Cura e pulizia

